


OpalStorage

CT Installation Guide


I Wire making

- Find CT in **SK-TL packaging**.
- Cut off the RJ45 connector.
- Insert the CT wire though the "Meter" gland.

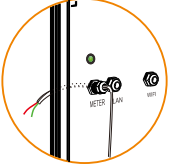


1

- Crimp the connector.

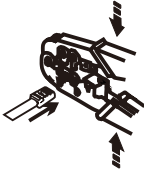

3

- Connect CT wire to a RJ45 connector.
- Please follow the sequence below:

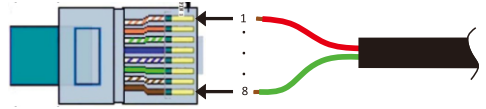


2


Pin	1	2	3	4	5	6	7	8
CT	Red wire	X	X	X	X	X	X	Green wire

II Connection

- Insert RJ45 to "CT" port on the SK-TL.

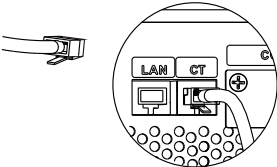

- Hang the CT on the Live line which connects to the electric meter.
- The arrow on the CT must point to public grid.

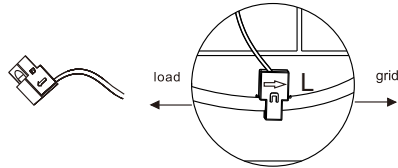

*Notes: Prepare a cat-5e or cat-6e cable as extension cable if the CT wire is too short to connect with the SK-TL.

1. Insert one side of the cat-5e/cat-6e cable into the LAN Cable Coupler Connector which is offered with CT. Insert the other side into the "CT" port on the SK-TL.
2. Insert RJ45 connector of the CT wire into the rest part of LAN Cable Coupler Connector.

III Abbreviation Drawing of the CT Connection

